

**EMINENT**

**EM8670-R2**  
**Wireless weatherproof solar powered**  
**strobe and siren**

**en**

Manual

# EM8670 R2 - Wireless weatherproof solar powered strobe and siren

## Table of contents


1.0 Introduction .....	2
2.0 Settings .....	3
2.1 Tamper switch .....	3
2.2 Switch settings .....	3
2.2.1 Volume setting.....	4
2.2.2 Siren duration setting.....	5
2.3 Connect to alarm panel.....	5
3.0 Installation & Notices .....	6
4.0 Frequently Asked Questions and other related information .....	6
5.0 Service and support.....	6
6.0 Warning and points of attention .....	7
7.0 Warranty conditions.....	8

## 1.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has undergone extensive testing by Eminent's technical experts. Should you experience any problems with this product, you are covered by Eminent warranty. Please keep this manual and the receipt in a safe place.

*Register your product now on [www.eminent-online.com](http://www.eminent-online.com) and receive product updates!*

## 2.0 Settings

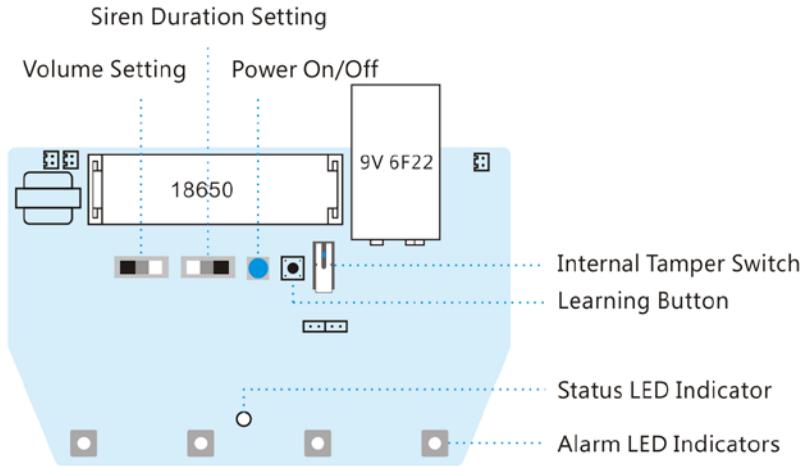

*Note: The status LED will flash once every 5 seconds in arm status. It will not flash when the system is in disarm status.*

### 2.1 Tamper switch

An unwanted opening, such as an attempt to sabotage the siren, will set off the alarm: sound the siren, send SMS and dial phone calls as programmed.

The siren has also a tamper switch on the backside, so when the unit will be removed from the wall it will also set off the alarm.

### 2.2 Switch settings


The siren can be set in such a way that it can respond to the type of anti-intrusion required.

To do this it is necessary to set the switches.

The switches are located at the PCB. When you need to change the switch settings please slightly open the box from the bottom side. When finished replace the box.


### 2.2.1 Volume setting

High (default)

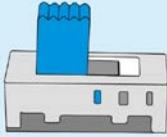


HIGH MUTE LOW

Mute

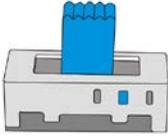

HIGH MUTE LOW


Low

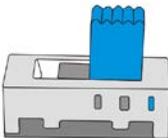

HIGH MUTE LOW


## 2.2.2 Siren duration setting

5 minutes

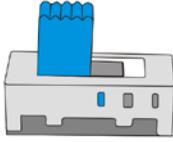


5MIN 2MIN 30S

2 minutes

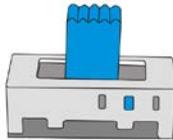

5MIN 2MIN 30S

30seconds (default)

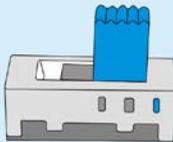

5MIN 2MIN 30S

## 2.3 Connect to alarm panel

*Note: before connecting the siren to the alarm system, please make sure you connected the 9V battery ! Also check that the delay time of the alarm system is set to 0 sec. during the pairing process. After pairing you can set the delay time back to the required time.*

Press the power button once to activate the siren.

Press the learning button (0.5 seconds), the system goes into learning status after one beep is heard. Press the Arm button on the alarm panel. The wireless accessory is learned successfully after another beep.

To remove the siren from the alarm panel, press the learning button and hold it until you will hear two beeps.

*Note: the siren is muted automatically when the alarm system is armed/disarmed !  
The alarm system can be armed/disarmed without disturbing other inhabitants.*

## 3.0 Installation & Notices

Open the case and remove the battery activation strip.

Hold the mounting plate in position and mark the positions of the four mounting holes. A spirit level placed on the casing will ensure a perfect level

Drill four holes and fit the wall plugs, and then fit supplied 5mm fixing screws in the holes.

Hinge the front cover locating tabs over the top edge of the back plate and carefully push the base of the siren cover into place. Secure the siren cover in place by refitting the fixing screw in the bottom edge of the cover. Do not over tighten the screw as this could damage the thread.

## 4.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Eminent will update these pages frequently to assure you have the most recent information. Visit [www.eminent-online.com](http://www.eminent-online.com) for more information about your product.

## 5.0 Service and support

This user manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please fill out the support form at the website [www.eminent-online.com/support](http://www.eminent-online.com/support).

You can also contact us by phone. Please check [www.eminent-online.com/support](http://www.eminent-online.com/support) for the helpdesk phone number and opening hours.

## 6.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations.

Always follow up the instructions in the manual\*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

When you connect the device to the mains, make sure it will not be damaged or subject to (high) pressure.

A power socket is needed which should be close and easy accessible from the device.

Repairing of the device should be done by qualified Eminent staff. Never try to repair the device yourself. The warranty immediately voids when products have undergone self-repair and/or by misuse. For extended warranty conditions, please visit our website at [www.eminent-online.com/warranty](http://www.eminent-online.com/warranty).

Dispose of the device appropriately. Please follow your countries regulation for the disposal of electronic goods.

Please check below safety points carefully:

- Do not apply external force on the cables
- Do not unplug the device by pulling the power cable
- Do not place the device near heating elements
- Do not let the device come in contact with water of other liquids
- If there is any strange sound, smoke or odor, remove the device immediately from the power outlet.
- Do not put any sharp objects into the venting hole of a product
- Do not use any damaged cables (risk of electric shock)
- Keep the product out of reach of children
- Wipe off the product with soft fabric, not water mop.
- Keep the power plug and outlet clean
- Do not unplug the device form the power outlet with wet hands
- Unplug the device when you don't use it for a long time
- Use the device at a well ventilated place

*\*Tip: Eminent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information. If you are experiencing any problems with the printed manual or*

*you cannot find what you are looking for, please always check our website [www.eminent-online.com](http://www.eminent-online.com) first for the newest updated manual.*

*Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.*

## 7.0 Warranty conditions

The Eminent warranty applies to all Eminent products. After buying a second-hand Eminent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Eminent warranty applies to all Eminent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Eminent warranty. Products are not covered by the Eminent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Eminent. Eminent may use refurbished materials for repair or replacement of your defective product. Eminent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Eminent networking product will keep working when settings are changed by the internet providers. Eminent cannot guarantee the working of web services, apps and other third party content that is available through Eminent products.

### When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.  
The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronics Group